

Portable Speaker System

USER'S MANUAL



BOOGIE BALL R

www.sven.fi



Congratulations on your purchase of the Sven speaker system!

Please read this operation Manual before using the unit and retain this operation Manual in safe place for future reference.

COPVRIGHT

© 2014. SVEN PTF. LTD. Version 1.0 (V 1.0)

This manual and information contained in it are copyrighted. All rights

reserved.

All trademarks are the property of their legal holders.

NOTICE OF RESPONSIBILITY RESTRICTION

Despite the exerted efforts to make this Manual more exact, some discrepancies may occur. The information of this manual is given on -as is-terms. The author and the publisher do not bear any liability to a person or an organization for loss or damage which has arisen from the information contained in this Manual.

UNPACKING

Unpack the device carefully. Make sure there are no accessories left in the box. Check up the device for damage; if the product was damaged during transportation, address the firm which carried out the delivery; if the product functions incorrectly, address the dealer at once.

ATTENTION!

Do not switch on the speaker system immediately after you bring it into a room from environment with negative temperature! After unpacking, the speaker system should be kept in conditions of room temperature for at least 4 hours.

Please fully charge the battery before the first use. Sound distortion may occur at low battery level.

Technical support is on www.sven.fi

DESCRIPTION

SVEN BOOGIE BALL R is equipped with an original compact dynamic speaker with Vacuum Bass resonator. The speaker has a dustproof capsule design with a built-in lithium-ion accumulator making its operation effective in any conditions.

peration effective in any conditions.

BOOGIE BALL R speaker system has good frequency-response, transient and transfer characteristics, even directivity pattern.

Due to its compact size, **BOOGIE BALL R** is particularly suitable for use with portable equipment: laptops,

music players, cell phones and other mobile devices.

PACKAGE CONTENTS

- Speaker 1 pc
 USB charging cable 1 pc
- Adapter (3.5 mm 2.5 mm) 1 pc
- User's manual 1 pc
 Warranty card 1 pc

SPECIAL FEATURES

- Vacuum Bass resonator
 Built-in Li-ion battery
- (7–8 hours life) • 360° sound field

LOUDSPEAKERS DESIGN

- ① Top cap
- Strap hole
- USB port
 Power and volume switch
- Power LFD
 - @ 3.5 mm mini-iack



Fig. 1. Top view



Fig. 2. Bottom view



ACCUMULATOR CHARGING

- To charge the battery, connect the device to a USB port of an operating PC or to an AC/DC adapter with a USB connector (not included), as shown in Fig. 3.
- At charging, the LED lights up red. The LED goes out if the accumulator is charged.
- \bullet Charge time: from an AC/DC adapter 2.5 hours, from a USB port 4 hours.

LOCATING

To increase sound volume, open the speaker capsule in such order before use:

- Find the marks next to the USB port as shown in Fig. 4.
- Press both sides until they meet.
- Make sure that the marks at each side match as shown in Fig. 4.



Fig. 3. Accumulator charging

① Marks ② Open ③ Close

- Twist the capsule cap counterclockwise to open the BOOGIE BALL R capsule.
- After operating the speaker and before transporting it, make steps 1-3 and twist the capsule cap clockwise to close the BOOGIE BALL R capsule.
- Note. Extend the resonator at no more than 2 cm.



Fig. 4. Installation and operation

INSTALLATION AND OPERATION GUIDE

- Before connecting, make sure all the components are switched off.
- Connect one plug of a 3.5 mm mini-jack adaptor cable to the speaker and the other plug to your audio device such as a mobile.
- phone, PC, CD, MP3, etc. (Fig. 5)
 Press the amplifier Power switch. The power LED will light up, and the amplifier will start operating.
- Adjust the volume with volume switch to the level you need.





- Switch off power (), and the power LED () will go out.
- Sound clearness can change if the speaker is charged for more than 4 hours. It's normal, BOOGIE BALL R will automatically adjust its sound settings during operation.



Fig. 5. Line in audio sources

SPECIFICATIONS

 Output power, W (PMIS)
 2.4

 Speaker unit,
 x38

 Voltage supply:
 Input voltage 3.7V, 300mAh

 Charging voltage
 USB/SV, 0.14 or AC/DC adaptor = 4.2V, 0.3A

 Frequency range, Hz
 100 – 20 000

 Dimensions, mm
 50 × 50 × 35

 Weicht, kg
 0.191

Notes:

- The above specifications are only for reference.
- The design and specifications are subject to change without prior notice*.
 - *Technical support is on www.sven.fi

Portable Speaker System





Модель: Boogie Ball R

Импортер в России: ООО «СКАНДИТРЕЛ», 111024, РФ, г. Москва, ул. Авиамоторная, д. 65, стр. 1.

ООО «РТ-Ф», 105082, г. Москва, ул. Фридрика Энгельса, д. 75, стр. 5. Условия гарантийного обслуживания смотрите

в гарантийном талоне или на сайте www.sven.fl. Гарантийный срок: 12 мес. Срок службы: 2 года. Производитель: «СВЕН ПТЕ. Лимитед», 176 Лжу Чият Роул. № 02-02. Сингатур. 427447.

По джу чизт гоуд, № 02-02, синталур, 42/447. Произведено под контролем «Свен Скандинавия Лимитед», 48310, Финляндия, Котка, Котолахдентие, 15. Сделано в Китае.

Manufacturer: SVEN PTE. LTD, 176 Joo Chiat Road, № 02-02, Singapore, 427447. Produced under the control of Oy Sven Scandinavia Ltd. 15, Kotolahdenie, Kotka, Finland, 48310. Made in China.

Registered Trademark of Oy SVEN
 Scandingvia Ltd Finland

BOOGIE BALL R